JUMBO LOK P/N 1070

INSTALLATION INSTRUCTIONS

For additional assistance call 888-514-0083 between 8AM-5PM EST or email: info@pactoolmounts.com

CAUTION

To avoid the risk of personal injury, property damage or product damage, please use the included fasteners for mounting.

- * The bracket must be securely mounted to a stable surface and material.
- * When mounting bracket to PAC TRAC aluminum products P/N 7000, P/N 7020, P/N 7040, P/N 7050 with the included Trac Lok inserts P/N 7016, torque the screws to a maximum 15 in-lbs.
- * PAC recommends regular and frequent inspections to be certain of proper operation and installation.



HURIZUN	TAL OR	VERTICALT	VIOUNTNG

PAC Fastener Packet P/N 7042	
STANDARD MTG. HARDWARE	QTY
%-20 x 1-3/4 S.S. P/N 2092 Flat Head Screw	2
P/N 2069LN ¼-20 S.S. Locking Hex Nut	2
PAC TRAC MTG. HARDWARE	QTY
P/N 2022 #10-24 x 1-7/8 S.S. Flat Head Screw	2
P/N 2054 #10 S.S. Flat Washer	2
P/N 7016 TRAC LOK INSERT	2
P/N 2096 WRENCH	1



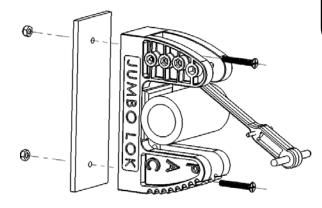


FIGURE 1 (Thru Mounting Method)

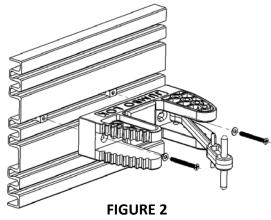

(PAC TRAC Mounting)

STEP 1 —Reposition or Replace the Lock Strap

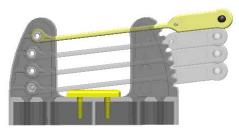

4 Strap Positions

The **Jumbo Lok** bracket provides 4 pivot positions for attaching the lock strap to adjust the grip range. In the lowest position, the **Jumbo Lok** can secure items as small as 3/8". Lock strap position can be determined by the size and shape of the item secured.

Using the included **Wrench P/N 2096**, remove the bolt from bracket base and reposition to the desired position. (See figure 2)

